


LUXEON FX2 Plus CW

Optical Rayset Readme


July 23rd, 2020

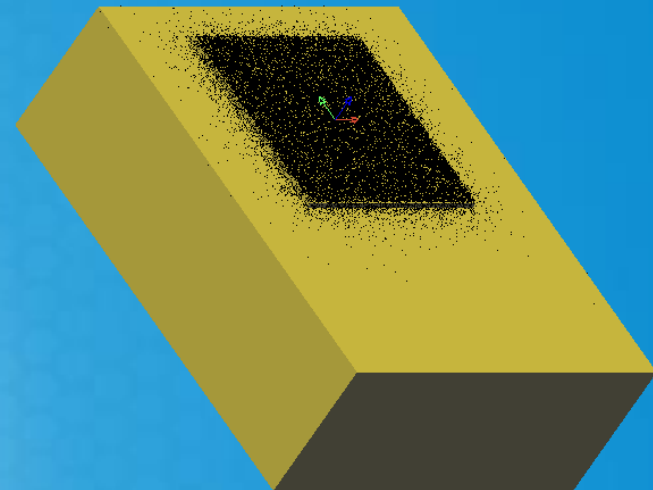


LUXEON FX2 Plus CW

Coordinate system

Top view

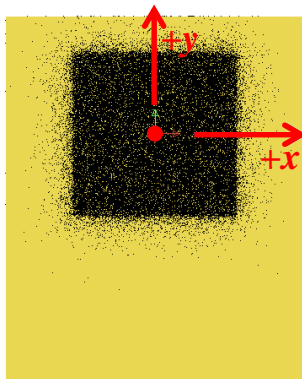

Side view

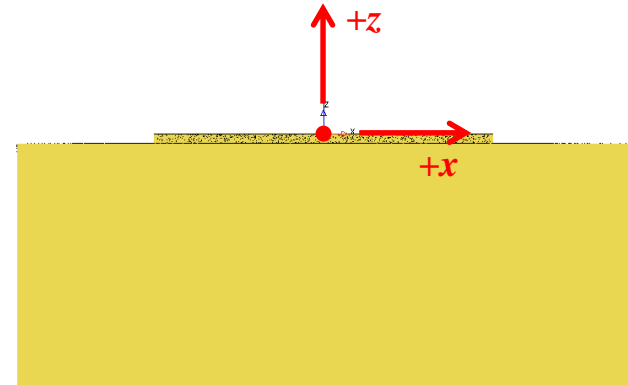


**CAD file and rayset files share the same coordinate system,
the origin is marked by the red dot in the sketches above:**

xy center == center of light emitting area
z=0 plane == top edge of light emitting area

LUXEON FX2 Plus CW

Source size

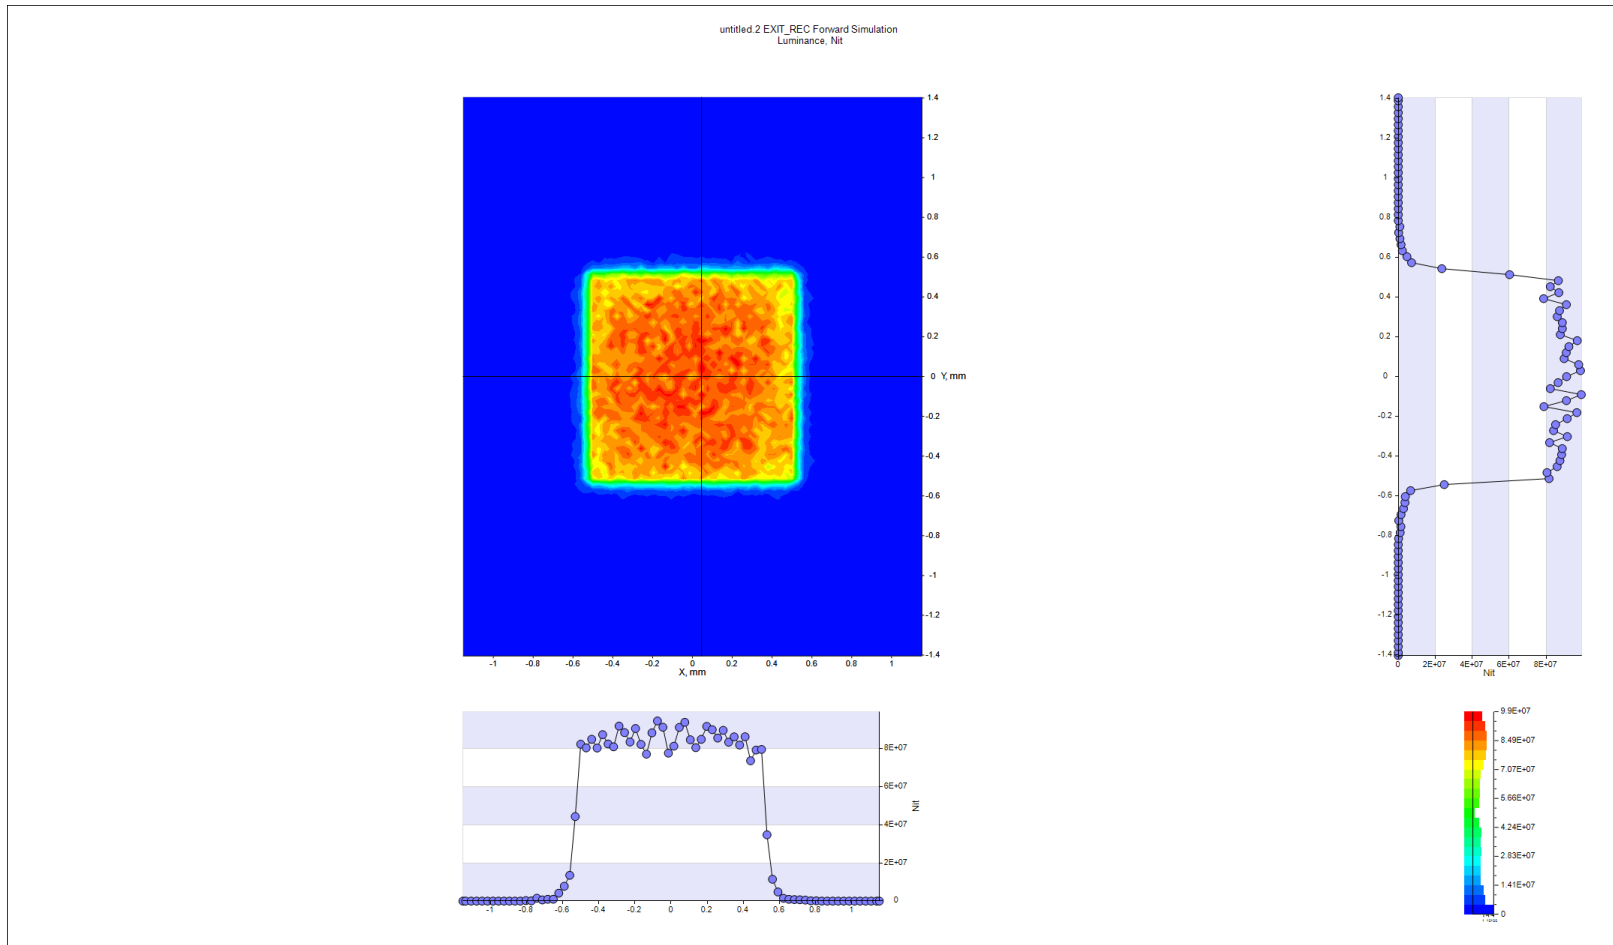


Source luminance (FWHM) = $1.07 \times 1.05 \text{ mm}^2$

The two orthogonal lines in the luminance image mark the reference planes of the two luminance cross sections.

LUXEON FX2 Plus CW

Luminous intensity distribution

Intensity per lumen over angle for vertical and horizontal slices
with lambertian cosine as reference

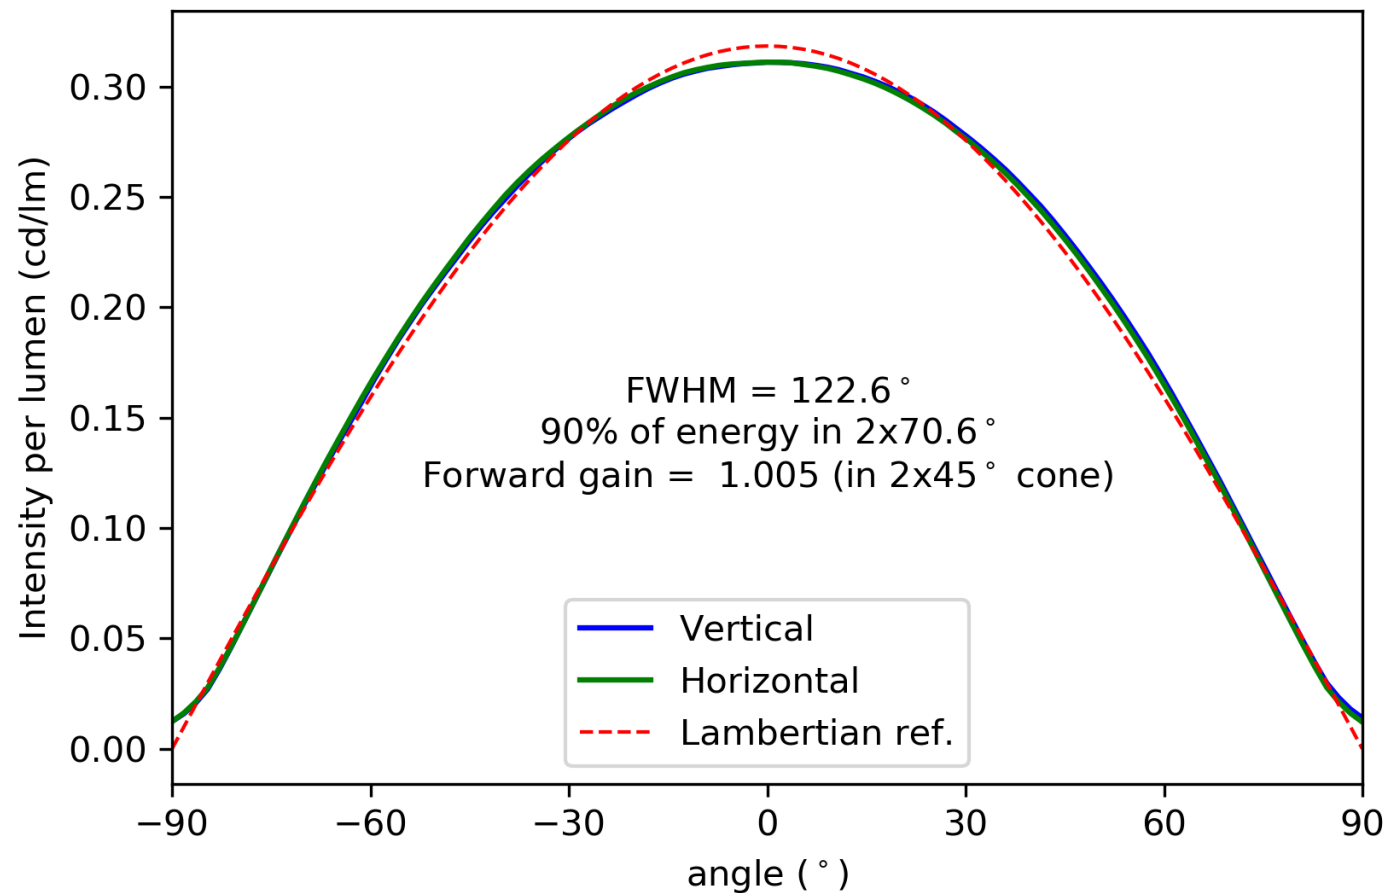

Download File Nomenclature (see next slide)

Example

LUXEON_Altilon_SMD2_1x4_gen4plus_20190206_20Mray_proj_Z_spectral_LT.ray

Product Name

Reference Date

helps identifying underlying dataset

Number of rays

e.g. 20 M = $20 \cdot 10^6$ rays

Ray starting points

'proj' indicates that ray starting points have been **projected** onto the CAD surface (---).

Spectral range

$\begin{Bmatrix} Y \\ Z \\ - \end{Bmatrix} = \begin{Bmatrix} \text{only yellow} \\ \text{only blue} \\ \text{full} \end{Bmatrix}$ spectrum taken into account



Spectral Information

$\begin{Bmatrix} \text{spectral} \\ - \end{Bmatrix} = \text{individual rays } \begin{Bmatrix} \text{do} \\ \text{don't} \end{Bmatrix} \text{ carry wavelength information}$

Target Software Package

LightTools (LT), ASAP, Zemax, ...

File Extension

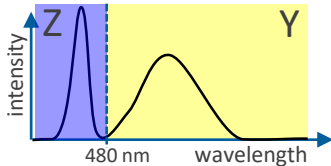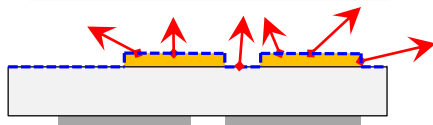

Additional Application Notes

Randomization

In some cases, reducing the number of rays in a rayset might be desirable. In order to facilitate the generation of reduced raysets, **all raysets mentioned in this readme file are randomized**. Hence, a rayset having 5 million rays (5M) can simply be generated by taking the first 5M rays from 20M rayset.


Projected Raysets: Propagated ray starting points

For projected raysets, the following procedure is applied for obtaining the starting points:

- (1) Project rays on CAD surface (---) → ray starting points
- (2) Propagate rays by 0.5 μm → propagated starting points (•)

All raysets mentioned in this readme file provide propagated starting points.

If raytracing includes the LED CAD, unpropagated rays are prone to be blocked at the surface. Rays with propagated starting points should not suffer from this problem.

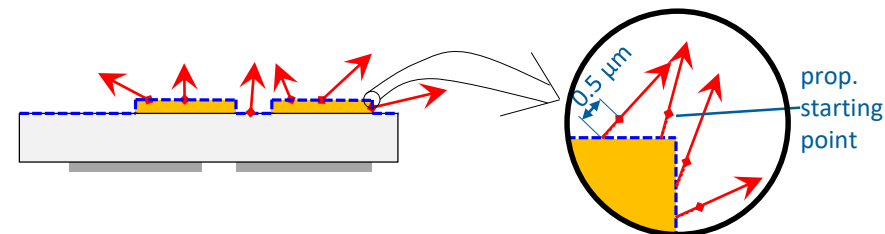

LUXEON FX2 Plus CW

Link to download folder

<https://raysets.lumileds.com/index.php/s/gKmSSHID8tokMtn>

Files available for download

Prosource

RS8	LUXEON_FX2_Plus_CW_20200723_1315.rs8	568 MB
-----	--------------------------------------	--------

LightTools

Spectral Projected	LUXEON_FX2_Plus_CW_20200723_40MRays_proj_spectral_LT.ray	1.19 GB	40MRays
Y-Component Projected	LUXEON_FX2_Plus_CW_20200723_20MRays_proj_Y_LT.ray	534 MB	20MRays
Z-Component Projected	LUXEON_FX2_Plus_CW_20200723_20MRays_proj_Z_LT.ray	532 MB	20MRays

ASAP & LucidShape

Y-Component Projected	LUXEON_FX2_Plus_CW_20200723_20MRays_proj_Y_ASAP.dis	534 MB	20MRays
Z-Component Projected	LUXEON_FX2_Plus_CW_20200723_20MRays_proj_Z_ASAP.dis	532 MB	20MRays

OPTIS SPEOS

Y-Component Spectral Projected	LUXEON_FX2_Plus_CW_20200723_20MRays_proj_Y_spectral_Speos.ray	610 MB	20MRays
Z-Component Spectral Projected	LUXEON_FX2_Plus_CW_20200723_20MRays_proj_Z_spectral_Speos.ray	608 MB	20MRays

Zemax

Spectral Projected	LUXEON_FX2_Plus_CW_20200723_40MRays_proj_spectral_zemax.dat	1.19 GB	40MRays
--------------------	---	---------	---------

Far Field

IES	LUXEON_FX2_Plus_CW_20200723_40MRays.ies	10.6 kB
-----	---	---------

Spectrum


Spectrum	LUXEON_FX2_Plus_CW_20200723_spectrum.txt	17.4 kB
----------	--	---------

CAD

STEP	LUXEON_FX2_Plus_CW_20200723_geometry.STEP	108 kB
IGES	LUXEON_FX2_Plus_CW_20200723_geometry.IGS	101 kB


LUXEON FX2 Plus CW

3D CAD view + ray starting points

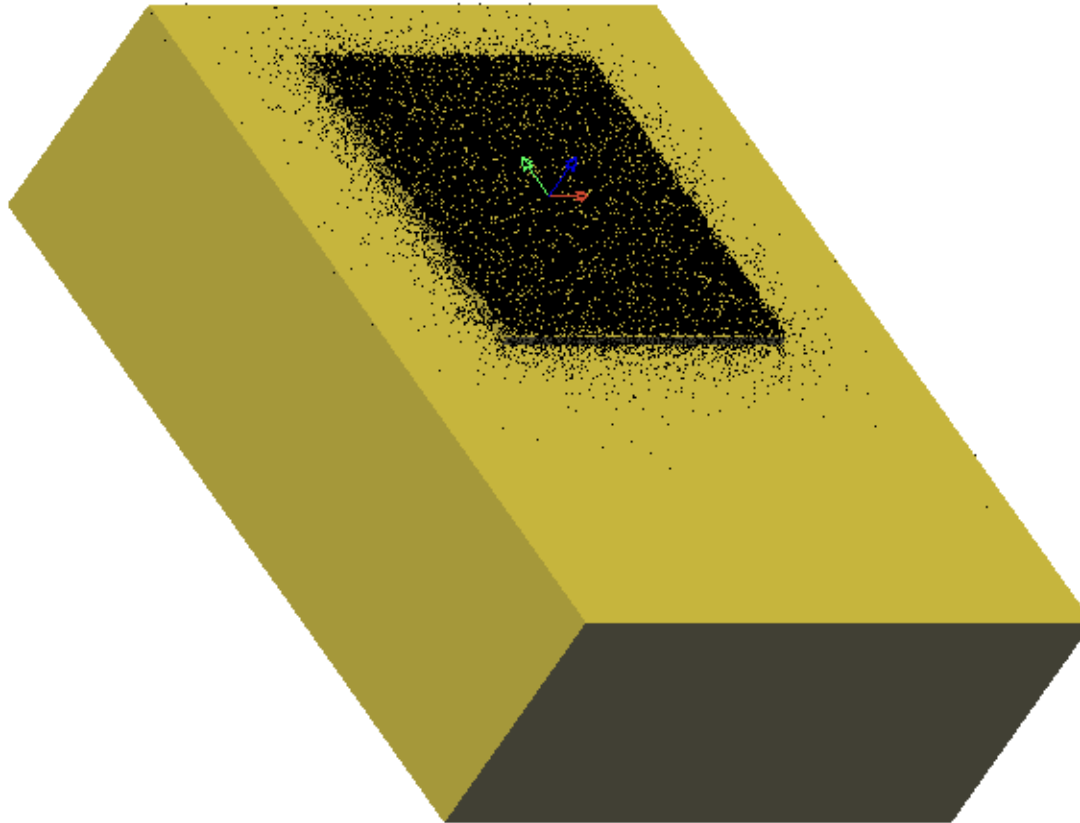


LUXEON FX2 Plus CW

Illuminance color chart (color over position)

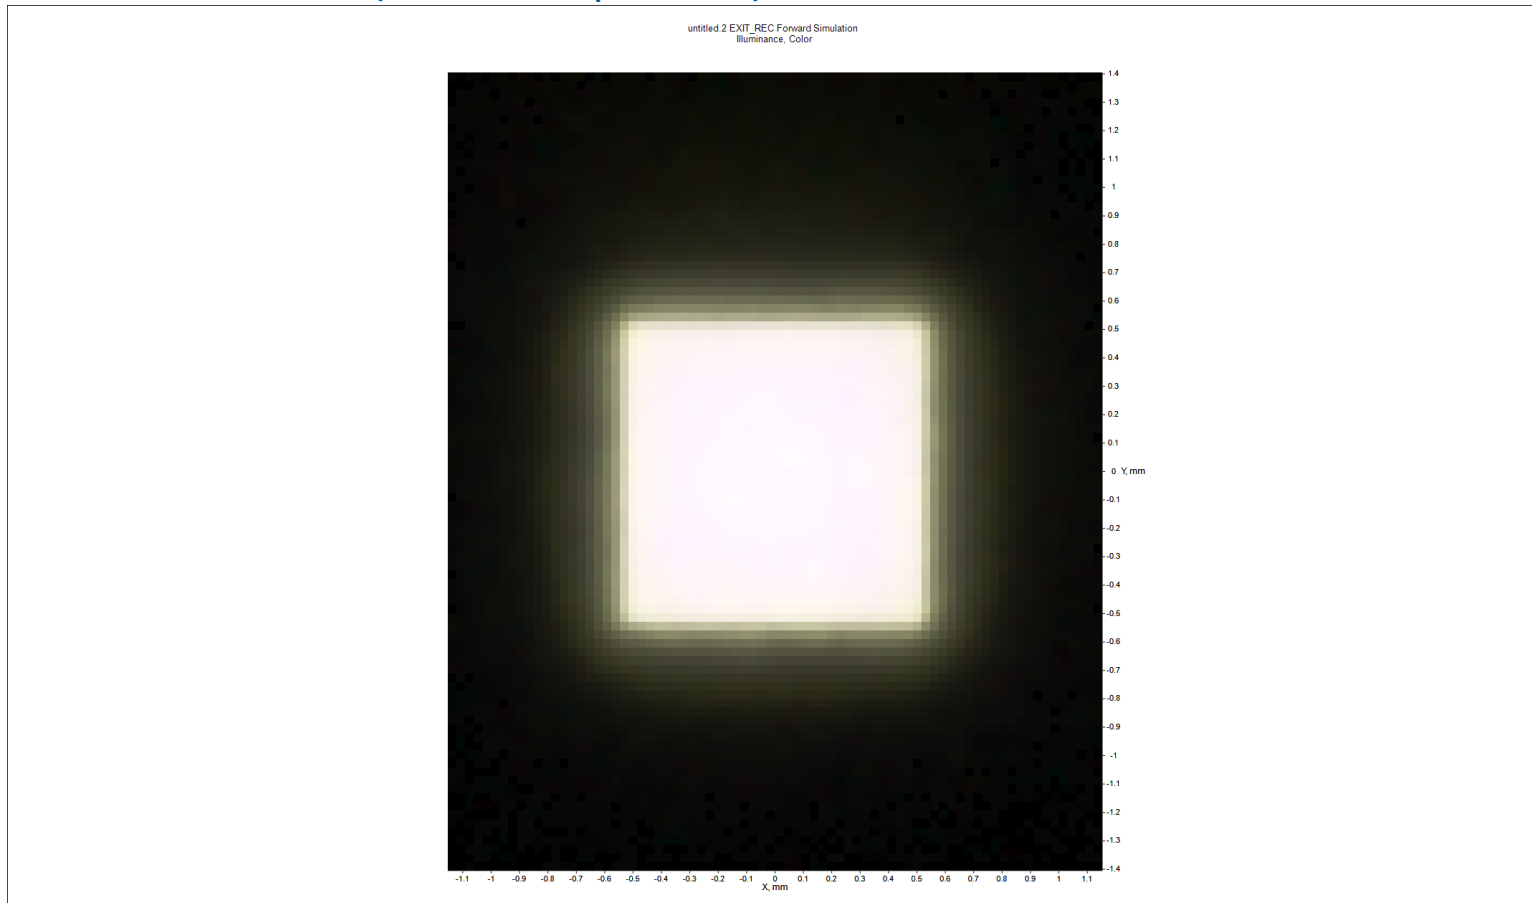

LUXEON FX2 Plus CW

Measured spectrum split in blue (Z) and yellow (Y) components

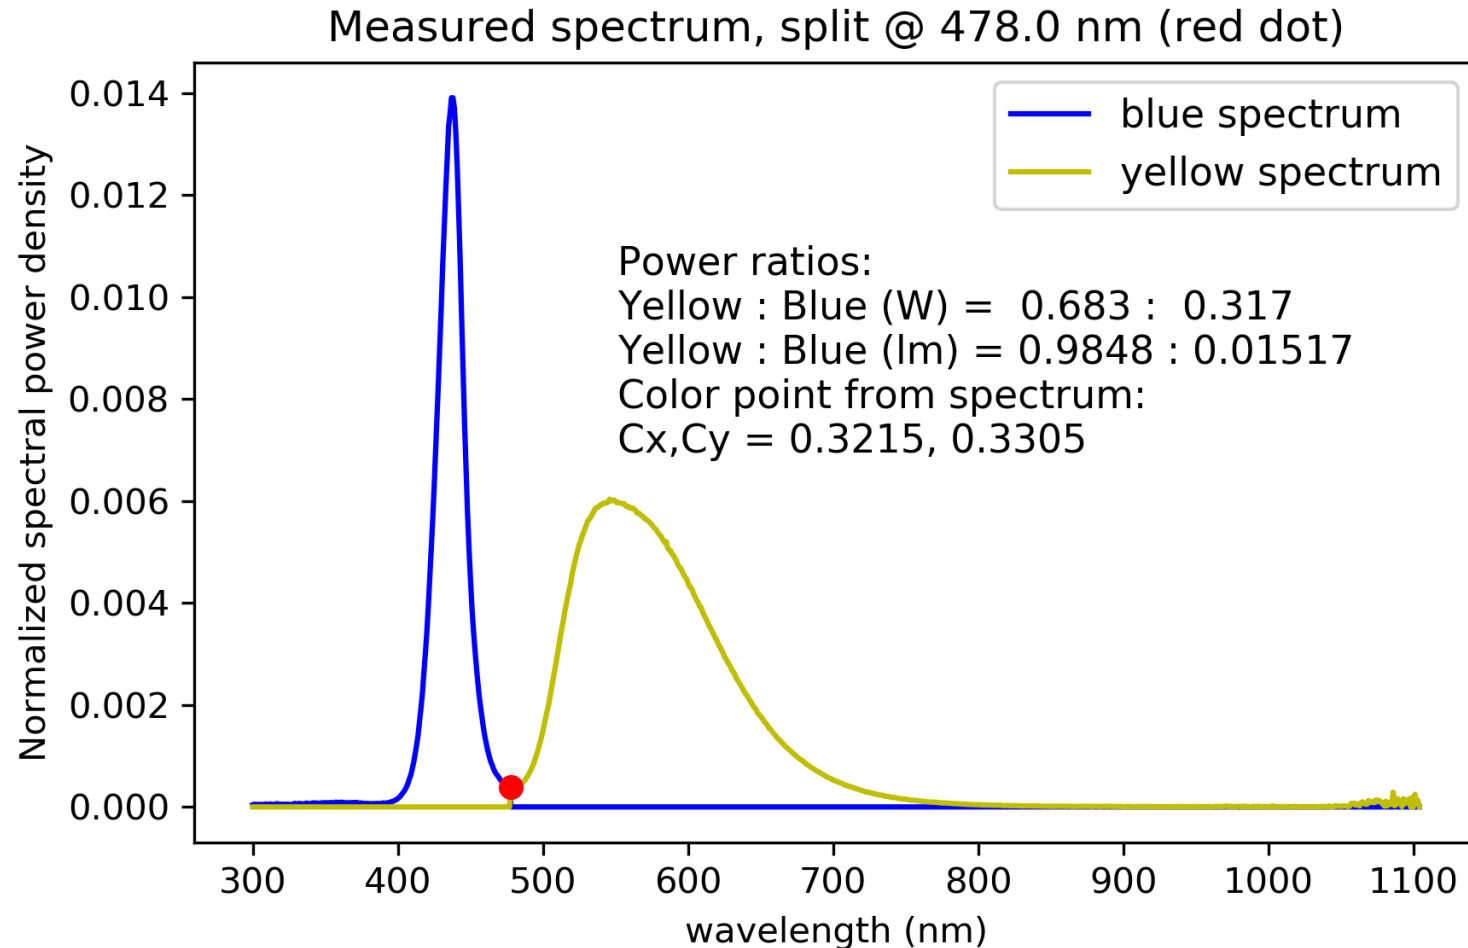

LUXEON FX2 Plus CW

Color data info

Parameter	Value
yellow : blue ratio (W) (from measured spectrum)	0.683 : 0.317
yellow : blue ratio (lm) (from measured spectrum)	0.9848 : 0.01517
Average color point Cx, Cy (from measured spectrum)	0.3215, 0.3305
Average color point Cx, Cy (from simulation)	0.3211, 0.3318
Color point Cx, Cy @ HV (from simulation)	0.3128, 0.3149
Average CCT (K) (from simulation)	6.05e+03

Lumileds ref.: 1315_LUXEON FX2 Plus CW_20200723



Neither Lumileds Holding B.V. nor its affiliates shall be liable for any kind of loss of data or any other damages, direct, indirect or consequential, resulting from the use of the provided information and data. Although Lumileds Holding B.V. and/or its affiliates have attempted to provide the most accurate information and data, the materials and services information and data are provided “as is,” and neither Lumileds Holding B.V. nor its affiliates warrants or guarantees the contents and correctness of the provided information and data. Lumileds Holding B.V. and its affiliates reserve the right to make changes without notice. You as user agree to this disclaimer and user agreement with the use of the provided materials, information and data. A listing of Lumileds product/patent coverage may be accessed at lumileds.com/patents.