


LUXEON Versat 3030 0.5 W PC Amber

Optical Rayset Readme


Data: June 6th, 2017
Updated: Nov. 30th, 2020

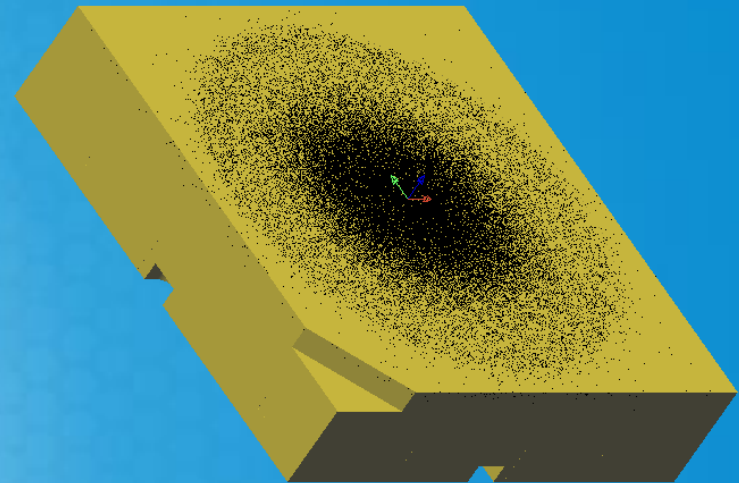


LUXEON Versat 3030 0.5 W PC Amber

Coordinate system

Top view

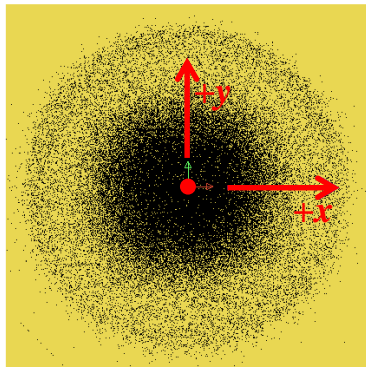

Side view

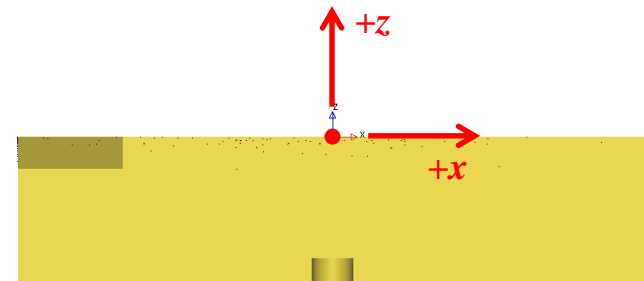


**CAD file and rayset files share the same coordinate system,
the origin is marked by the red dot in the sketches above:**

xy center == center of light emitting area
z=0 plane == top edge of light emitting area

LUXEON Versat 3030 0.5 W PC Amber

Luminance distribution at $z = 0$ mm

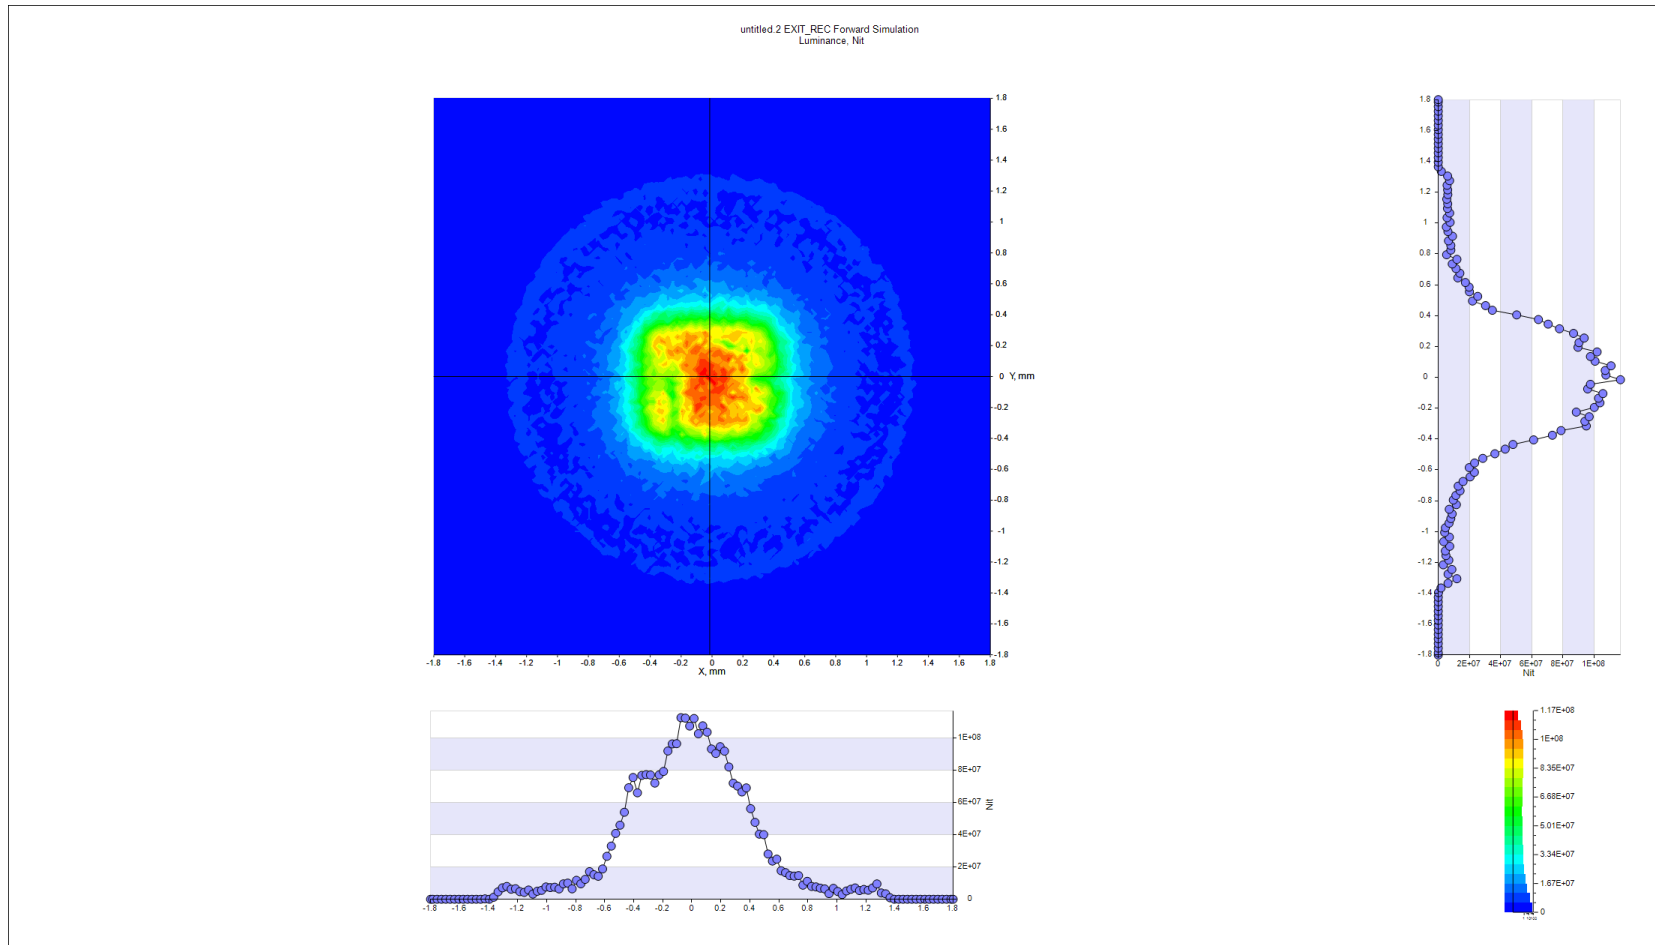


The two orthogonal lines in the image mark the reference planes of the two cross sections.

LUXEON Versat 3030 0.5 W PC Amber

Luminous intensity distribution

Normalized intensity for vertical and horizontal slices
with lambertian cosine as reference

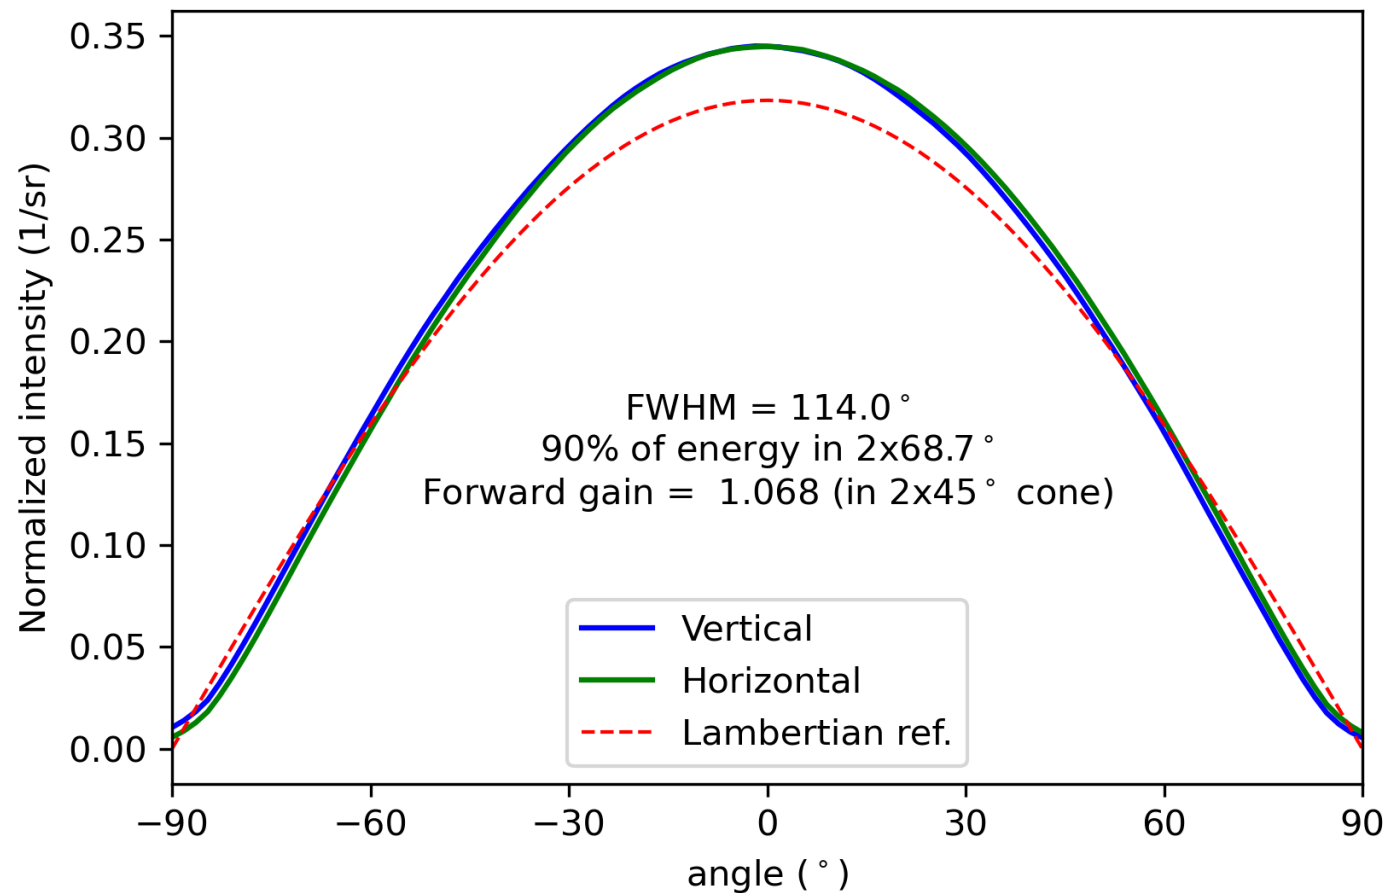

Download File Nomenclature (see next slide)

Example

LUXEON_Altilon_SMD2_1x4_gen4plus_20190206_20Mray_proj_Z_spectral_LT.ray

Product Name

Reference Date

helps identifying underlying dataset

Number of rays

e.g. 20 M = $20 \cdot 10^6$ rays

Ray starting points

'proj' indicates that ray starting points have been **projected** onto the CAD surface (---).

Spectral range

$\begin{Bmatrix} Y \\ Z \\ - \end{Bmatrix} = \begin{Bmatrix} \text{only yellow} \\ \text{only blue} \\ \text{full} \end{Bmatrix}$ spectrum taken into account



Spectral Information

$\begin{Bmatrix} \text{spectral} \\ - \end{Bmatrix} = \text{individual rays } \begin{Bmatrix} \text{do} \\ \text{don't} \end{Bmatrix} \text{ carry wavelength information}$

Target Software Package

LightTools (LT), ASAP, Zemax, ...

File Extension

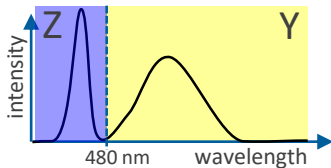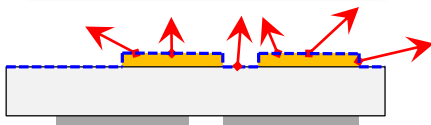

Additional Application Notes

Randomization

In some cases, reducing the number of rays in a rayset might be desirable. In order to facilitate the generation of reduced raysets, **all raysets mentioned in this readme file are randomized**. Hence, a rayset having 5 million rays (5M) can simply be generated by taking the first 5M rays from 20M rayset.


Projected Raysets: Propagated ray starting points

For projected raysets, the following procedure is applied for obtaining the starting points:

- (1) Project rays on CAD surface (----) → ray starting points
- (2) Propagate rays by 0.5 μm → propagated starting points (•)

All raysets mentioned in this readme file provide propagated starting points.

If raytracing includes the LED CAD, unpropagated rays are prone to be blocked at the surface. Rays with propagated starting points should not suffer from this problem.

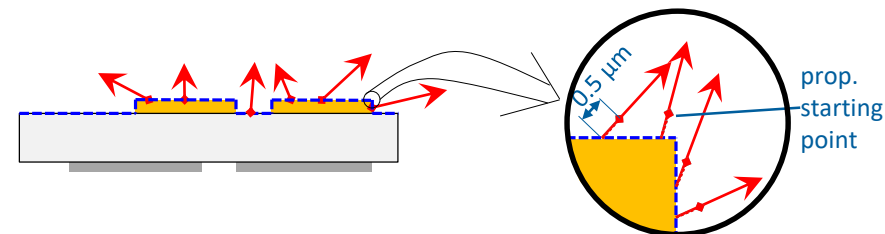

LUXEON Versat 3030 0.5 W PC Amber

Link to download folder

<https://raysets.lumileds.com/index.php/s/jYLb2AyTCkbG7Mf>

Files available for download

Prosource

| | | |
|-----|--|--------|
| RS8 | LUXEON_Versat_3030_0_5W_PCA_20170606_502.rs8 | 380 MB |
|-----|--|--------|

LightTools

| | | | |
|-----------------------|---|---------|---------|
| Spectral Projected | LUXEON_Versat_3030_0_5W_PCA_20170606_40MRays_proj_spectral_LT.ray | 1.08 GB | 40MRays |
| Y-Component Projected | LUXEON_Versat_3030_0_5W_PCA_20170606_20MRays_proj_Y_LT.ray | 534 MB | 20MRays |
| Z-Component Projected | LUXEON_Versat_3030_0_5W_PCA_20170606_20MRays_proj_Z_LT.ray | 430 MB | 20MRays |

ASAP & LucidShape

| | | | |
|-----------------------|--|--------|---------|
| Y-Component Projected | LUXEON_Versat_3030_0_5W_PCA_20170606_20MRays_proj_Y_ASAP.dis | 534 MB | 20MRays |
| Z-Component Projected | LUXEON_Versat_3030_0_5W_PCA_20170606_20MRays_proj_Z_ASAP.dis | 430 MB | 20MRays |

OPTIS SPEOS

| | | | |
|--------------------------------|--|--------|---------|
| Y-Component Spectral Projected | LUXEON_Versat_3030_0_5W_PCA_20170606_20MRays_proj_Y_spectral_Speos.ray | 610 MB | 20MRays |
| Z-Component Spectral Projected | LUXEON_Versat_3030_0_5W_PCA_20170606_20MRays_proj_Z_spectral_Speos.ray | 492 MB | 20MRays |

Zemax

| | | | |
|--------------------|--|---------|---------|
| Spectral Projected | LUXEON_Versat_3030_0_5W_PCA_20170606_40MRays_proj_spectral_zemax.dat | 1.08 GB | 40MRays |
|--------------------|--|---------|---------|

Far Field

| | | |
|-----|--|---------|
| IES | LUXEON_Versat_3030_0_5W_PCA_20170606_40MRays.ies | 10.7 kB |
|-----|--|---------|

Spectrum


| | | |
|----------|---|---------|
| Spectrum | LUXEON_Versat_3030_0_5W_PCA_20170606_spectrum.txt | 12.7 kB |
|----------|---|---------|

CAD

| | | |
|------|--|--------|
| STEP | LUXEON_Versat_3030_0_5W_PCA_20170606_geometry.STEP | 260 kB |
| IGES | LUXEON_Versat_3030_0_5W_PCA_20170606_geometry.IGS | 501 kB |


LUXEON Versat 3030 0.5 W PC Amber

3D CAD view + ray starting points

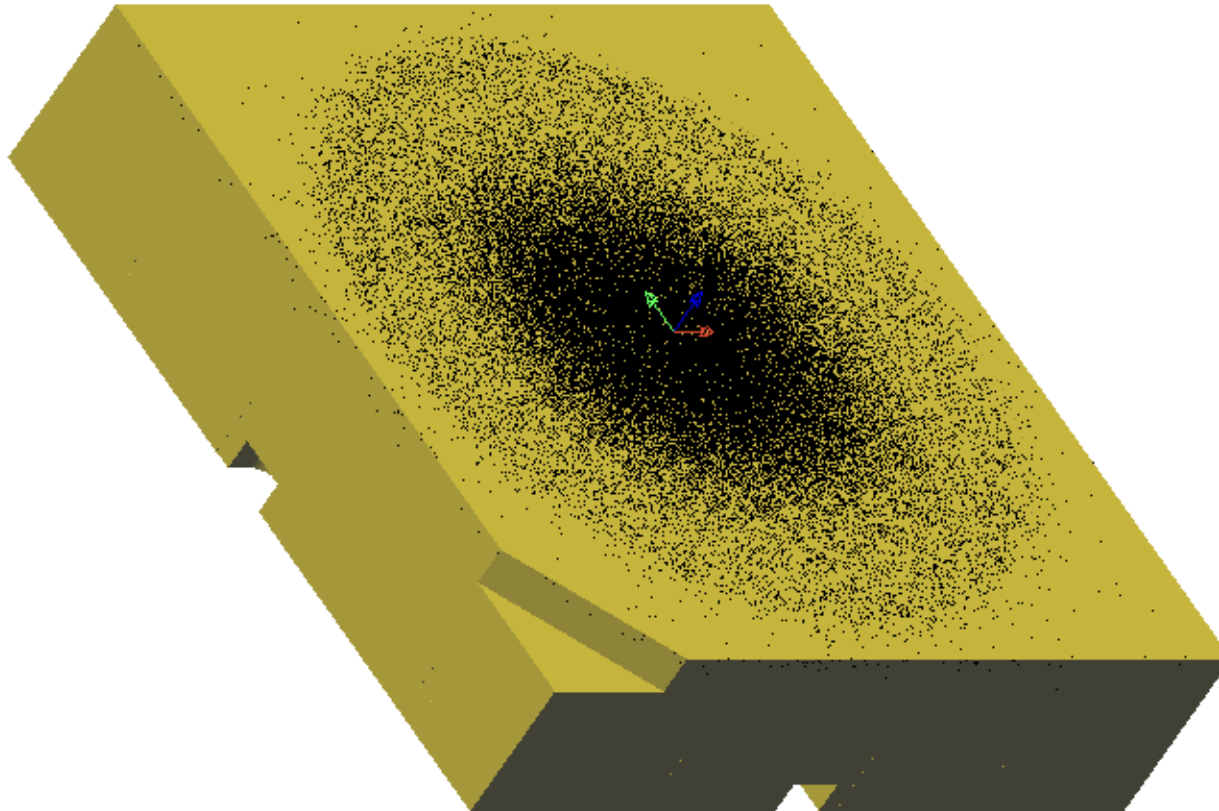


LUXEON Versat 3030 0.5 W PC Amber

Illuminance color chart (color over position)

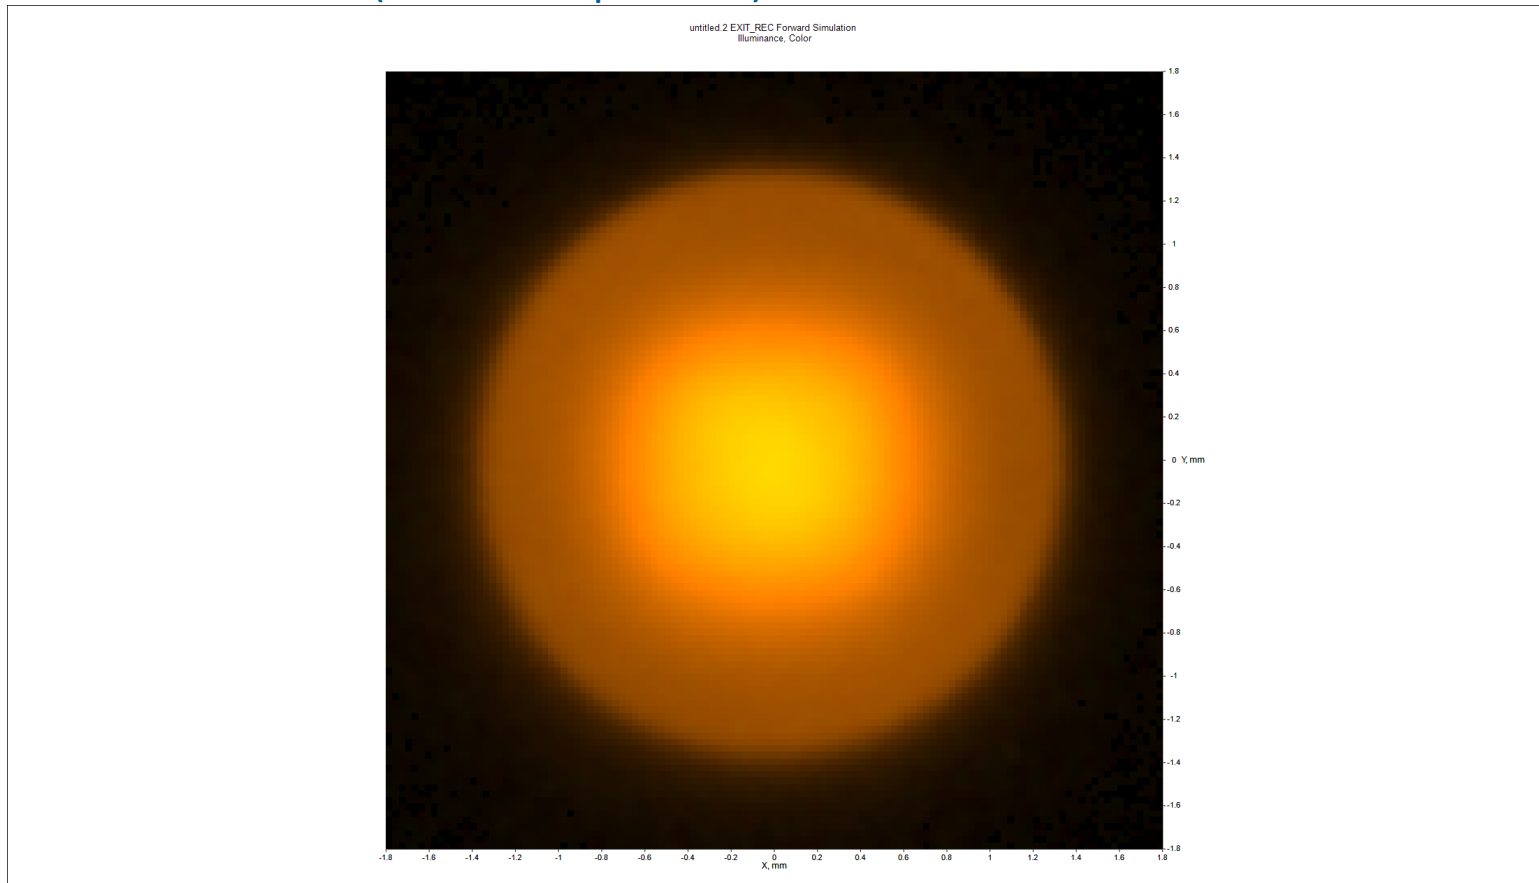

LUXEON Versat 3030 0.5 W PC Amber

Measured spectrum split in blue (Z) and yellow (Y) components

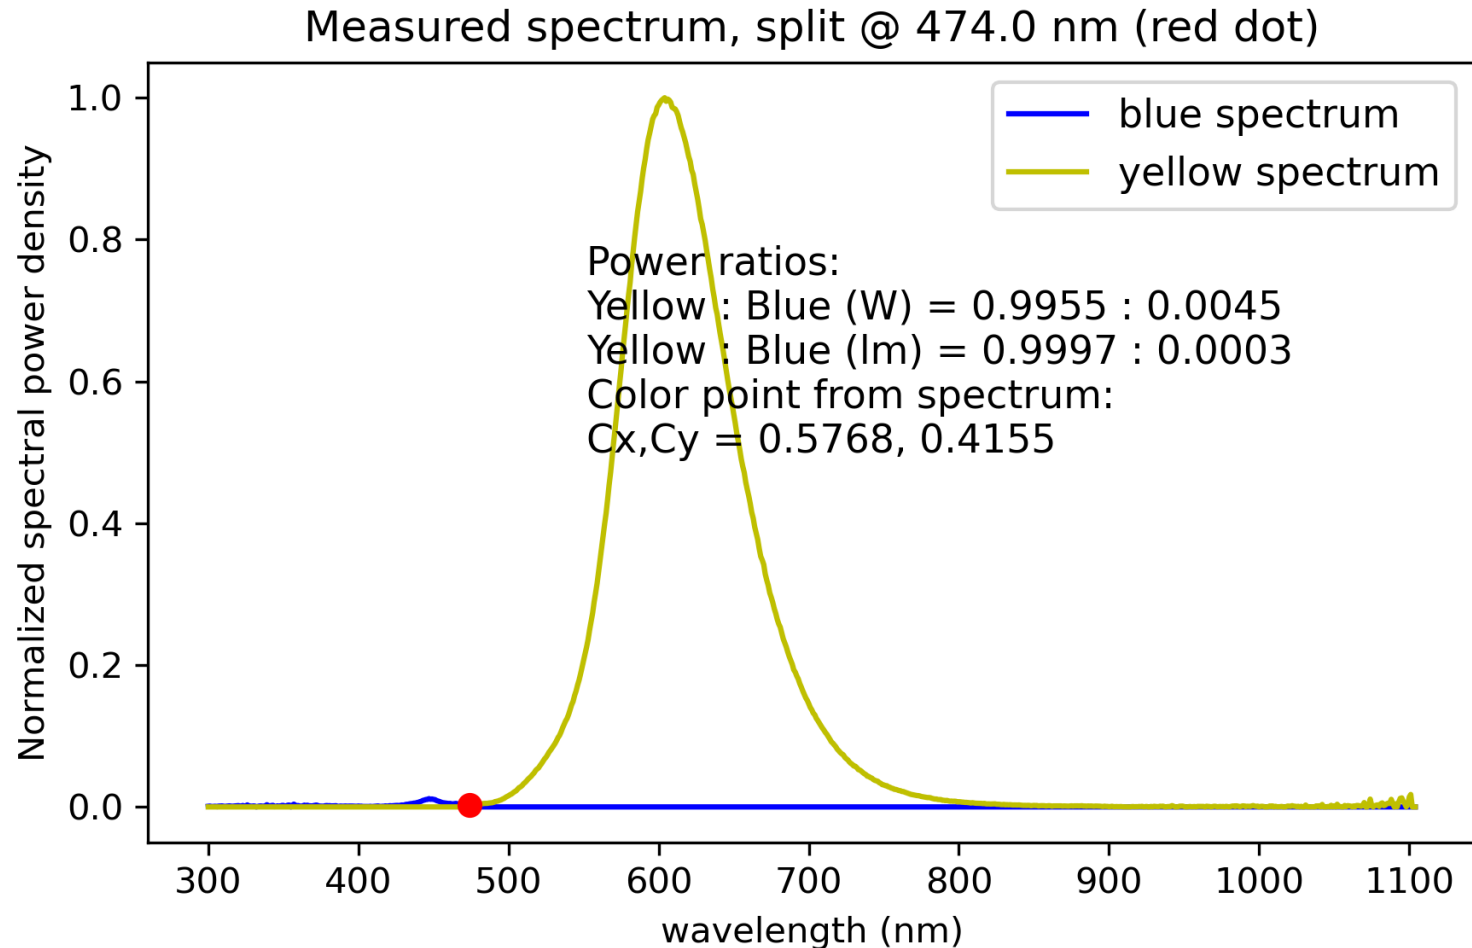

LUXEON Versat 3030 0.5 W PC Amber

Color data info

| Parameter | Value |
|--|-----------------|
| yellow : blue ratio (W) (from measured spectrum) | 0.9955 : 0.0045 |
| yellow : blue ratio (lm) (from measured spectrum) | 0.9997 : 0.0003 |
| Average color point Cx, Cy (from measured spectrum) | 0.5768, 0.4155 |
| Average color point Cx, Cy (from simulation) | 0.5770, 0.4154 |
| Color point Cx, Cy @ HV (from simulation) | 0.5774, 0.4145 |
| Average CCT (K) (from simulation) | 1.667e+03 |

Lumileds ref.: SJ000502_LUXEON Versat 3030 0.5 W PC Amber_20170606



Neither Lumileds Holding B.V. nor its affiliates shall be liable for any kind of loss of data or any other damages, direct, indirect or consequential, resulting from the use of the provided information and data. Although Lumileds Holding B.V. and/or its affiliates have attempted to provide the most accurate information and data, the materials and services information and data are provided "as is," and neither Lumileds Holding B.V. nor its affiliates warrants or guarantees the contents and correctness of the provided information and data. Lumileds Holding B.V. and its affiliates reserve the right to make changes without notice. You as user agree to this disclaimer and user agreement with the use of the provided materials, information and data. A listing of Lumileds product/patent coverage may be accessed at lumileds.com/patents.